



AGS Login Codes

A screenshot of a software interface for entering a new password. At the top, there is a text box with the instruction "Enter a new password of minimum 4 digits." and the "dametric" logo. Below this is a numeric keypad with buttons for digits 1 through 0, a "Clear" button, and "Cancel" and "OK" buttons at the bottom left.

GMS CE Panel-PC

Codes

The Login makes it possible to login to the different authorization levels which give more or less access to the different settings and functions within the system.

The user areas are divided into four groups, logged out, operator and service.

Note, the codes can be changed by the administrator.

Logged out

The user can use most forms but cannot calibrate or change any parameters.

Operator, code 1212

The operator can calibrate the AGS sensor but cannot change any parameters.

Service, code 2730

In this mode, you can change parameters and calibrate functions in the system except the AGS sensor. You can also change settings and parameter values.

Contact

Sales, development, production and service:

Dametric AB

Jägerhorns Väg 19, SE 141 75 Kungens Kurva, Sweden

Phone: +46-8 556 477 00

Telefax: +46-8 556 477 29

E-Mail: service@dametric.se

Website: www.dametric.se

