




## AGS Administrator Login Code

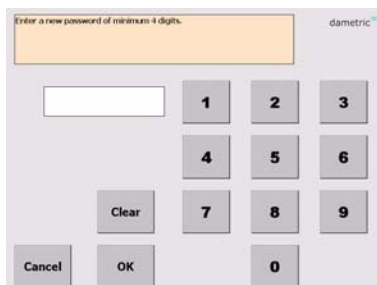

## GMS CE Panel-PC

### Codes

The Login makes it possible to login to the different authorization levels which give more or less access to the different settings and functions within the system.

The user areas are divided into four groups, logged out, operator, service and administrator.

### Logged out

The user can use most forms but cannot calibrate or change any parameters.

### Operator, code 1212

The operator can calibrate the AGS sensor but cannot change any parameters.

### Service, code 2730

In this mode, you can change parameters and calibrate functions in the system except the AGS sensor. You can also change settings and parameter values.

### Administrator, code 4711

Note. In this mode, you can do all of the functions in the system without interlocking. It means the administrator must be well trained and also understand the effect of the operation.

The administrator can do tasks like clear log files, upgrade software, change refiner type and so on. The administrator can also change the login codes for the operator and service login.

### Contact

Sales, development, production and service:

### Dametric AB

Jägerhorns Väg 19, SE 141 75 Kungens Kurva, Sweden

Phone: +46-8 556 477 00

Telefax: +46-8 556 477 29

E-Mail: [service@dametric.se](mailto:service@dametric.se)

Website: [www.dametric.se](http://www.dametric.se)

